

Drilling jig VARIANT MULTI 2D VN 5046

Drilling jig VARIANT MULTI 2D VN 5046

for simultaneous fitting



Notes

Fitting instructions


1. Place door into frame.
2. Mark hinge position, fix drilling jig with attached rail between door and frame and drill holes.
3. Mount frame and door parts. Tighten clamping screws.
4. Hang door.

Scope of supply

- 1 x drilling jig
- 1 x drill bit \varnothing 9,2 mm
- 1 x drill bit \varnothing 5,2 mm
- 1 x drill bit \varnothing 3,0 mm
- 1 x Allen key 4 mm
- 1 x fitting instruction

Note

Special drilling jigs are necessary for stainless steel profiles.

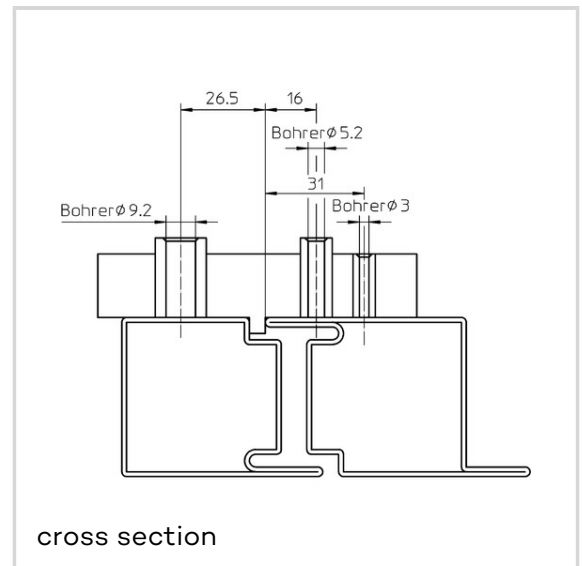

Suitable for

MULTI 2D VN 5046

Item versions

Finish

without (SW 000)

Drilling jig VARIANT MULTI 2D VN 5046

VPE	pack of 1
DIN	DIN right and left hand
Article number	5 250869 0 00001
EAN	4015471034986