



Assembly instructions for 3 piece rose

Step 1

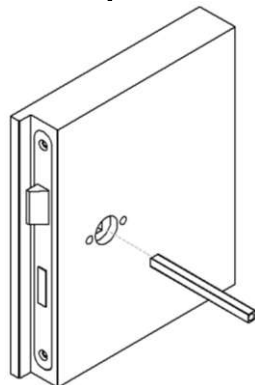


Drill a 19mm hole in the door to allow the spindle to be located through the lock follower.

Step 2

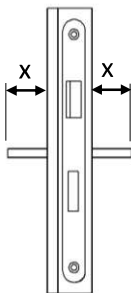


Place the spindle in the lock follower and centre it.

Step 3

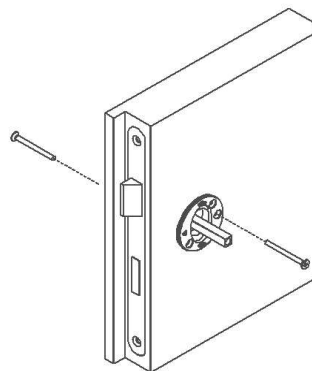


Fix the rose mounting plates (metal) and secure with the M4 bolt through fixings.

Step 4

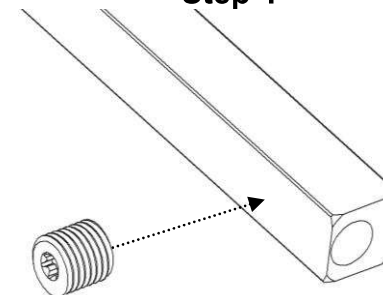


Attention: Insert the spindle in such a way that the point of the grub screw can break through the thinnest side.

Step 5

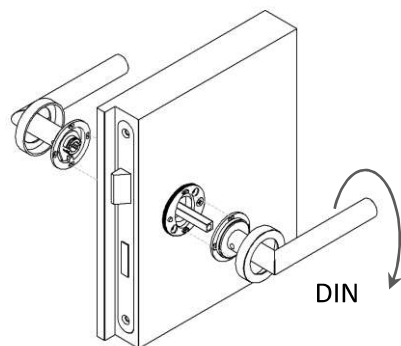


Place the lever base rose on the spindle and push onto the mounting plates. Pay attention to the direction of the lever handles ensuring they can be pressed downwards.

Step 6

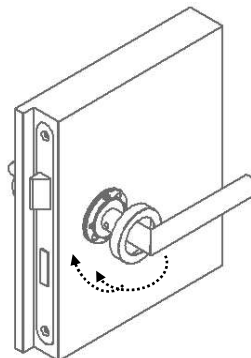

Fix with screw-over ring

Step 7

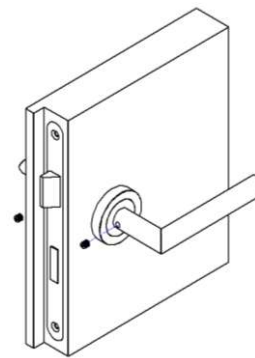

Tighten the grub screws on both levers ensuring they pierce the spindle.